



REDRAGON

KUMARA

Wired Mechanical Gaming Keyboard

Wired Mechanical Gaming Keyboard (No Light) Operating Instructions

Dear user

Thank you for choosing REDRAGON brand. To protect your rights and for better customer service, we ask that you note our warranty rules.

1. Within 18 months of purchase date, repair is guaranteed for failure due to electrical circuit problems. Man-made damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included.
2. Consumable parts (such as foot pads) and spare parts replacement are not included in our warranty.

OS Support

Windows XP/Vista/Win7/Win8/Win10

Product feature

1. Computer USB port interfaces with the keyboard without needing to install drivers or software.
2. To swap [W][A][S][D] and arrow direction keys: Press and hold the [FN] key, and then press the [W] key to interchange the function of four letter keys [W][A][S][D] and four direction keys [UP][DOWN][LEFT][RIGHT]. Repeat the above operation to restore the previous setting.
3. To disable the [WIN] key: Press and hold the [FN] key, and then press [WIN] key to turn off [WIN] key in order to avoid leaving gaming function if user presses [WIN] key by mistake. Repeat the above operation to restore the function.
4. Multimedia function: 12 multimedia keys. Access by pressing the [FN] key and one of the [F1]-[F12] keys at the same time.
 FN+F1 Open the media player
 FN+F2 Volume down
 FN+F3 Volume up
 FN+F4 Mute
 FN+F5 Stop
 FN+F6 Previous
 FN+F7 Play/ Pause
 FN+F8 Next
 FN+F9 Open email
 FN+F10 Open homepage
 FN+F11 Locking key (press to lock the functions of all keys, and press again to unlock)
 FN+F12 Open the calculator

FAQ

1. If the keyboard doesn't respond, please check if the keyboard's USB cable is correctly inserted into the corresponding USB port on the computer, or try another USB port on the computer.
2. If you spill liquid on the keyboard, please remove the keyboard's USB cable from the computer immediately. Wipe up excess liquid and put the keyboard in a warm place (for instance, under a lamp) to let the keyboard dry naturally before using again.



Piece parts	Pb	Hg	Cd	Cr(VI)	PBB	PBDE
Plastic parts	○	○	○	○	○	○
Metal parts	○	○	○	○	○	○
Circuit components	○	○	○	○	○	○
Cable	○	○	○	○	○	○

Note:

○ = indicates the percentage of toxic or harmful substances in the parts



Our products do not contain toxic or harmful substances and environment friendly, it can be recycled

Name of commodity	Day Month Year		
Warranty is valid within 18 months from the purchase date.			
Customer	Name:		
	Tel:	Zip code:	
Retailer	Address:		
	Name:	Address:	
	Tel:	Zip code:	